

# Handbook



# 207



## FAMILIARISATION

### EXTERIOR

#### Panoramic sunroof

This extensively glazed roof provides incomparable visibility and light in the passenger compartment.

» 78

#### Opening rear screen (SW)

This system gives easy access to the luggage compartment without having to open the tailgate.

Check that the rear screen is closed correctly before opening the boot or locking the vehicle.

» 77

#### Rear parking sensors

This system provides a warning when reversing by detecting obstacles located behind the vehicle.

» 123

#### Temporary tyre repair kit

This kit is a complete system, consisting of a compressor and an integral sealant, for the temporary repair of a tyre.

» 132

#### Tyre under-inflation detection

This system monitors the pressure in each tyre and warns you if a puncture or deflation occurs.

» 101

#### Static directional lighting

This additional lighting automatically provides extended visibility when turning.

» 84



OPEN

Remote control key



- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.
- C. Unlocking and partially opening the rear screen (SW).

» 66

**i** Also...

- D. Normal locking or Deadlocking the vehicle.

Fuel tank



1. Opening the fuel filler flap.
2. Opening and hooking the fuel filler cap.


Capacity of the tank: approximately 50 litres.

» 79

**i** On Diesel vehicles, the fuel tank opening incorporates a misfuel prevention device which prevents filling with petrol.

» 80

Bonnet

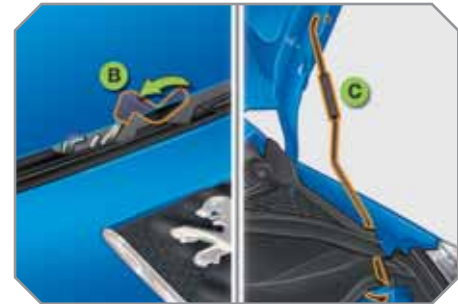

- A. Interior release lever.
- B. Exterior safety catch.
- C. Bonnet stay.

» 126

## FAMILIARISATION

### OPENING

#### Boot (SW)



1. Unlocking the vehicle.
2. Opening the boot.

» 77

#### Rear screen (SW)

Vehicle locked



1. Unlocking and partially opening the rear screen.
2. Opening the rear screen.


Vehicle unlocked



1. Partially opening the rear screen.
2. Opening the rear screen.

» 77

#### Panoramic sunroof (SW)

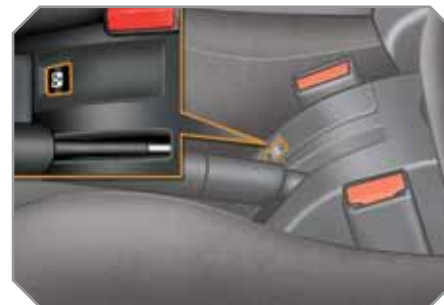

1. Opening the blind.
2. Closing the blind.

» 78



The tailgate and the rear screen cannot both be open at the same time, to avoid damaging the rear screen.

**INTERIOR**

**Distance recorder**

The trip distance recorder is reset to zero by pressing the right-hand button on the instrument panel for more than two seconds.

»» 30



**Dual-zone digital air conditioning**

This system allows different levels of comfort to be set for the driver and the front passenger. It then automatically controls these levels according to the ambient conditions.

»» 48

**Audio and communication systems**

This equipment benefits from the latest technology: MP3 compatible Peugeot Connect Sound, Peugeot Connect USB, Bluetooth hands-free system, Peugeot Connect Navigation, auxiliary sockets, JBL audio system.

**Peugeot Connect Navigation**

»» 173

**Peugeot Connect Sound**

»» 203

**Peugeot Connect USB**

»» 210

## FAMILIARISATION

### INSTRUMENTS AND CONTROLS



1. Cruise control/speed limiter switches.
2. Steering wheel adjustment control.
3. Lighting and direction indicator control stalk.
4. Instrument panel.
5. Driver's airbag.  
Horn.
6. Gear lever.
7. Parking brake.
8. Panoramic sunroof blind control (SW).
9. Bonnet release lever.
10. Door mirror controls.  
Electric window controls.  
Rear electric windows deactivation control.
11. Fusebox.
12. Headlamp height adjustment.
13. Side adjustable air vent.
14. Front door window demisting vent.
15. Speaker (tweeter).
16. Windscreen demisting vent.

INSTRUMENTS AND CONTROLS



1. Steering lock and ignition.
2. Audio equipment steering mounted controls.
3. Wiper/wash-wipe/trip computer control stalk.
4. Hazard warning lamps switch.
5. Multifunction screen.  
Seat belt fastening status warning lamps.
6. Sunshine sensor.
7. Passenger's airbag.
8. Glove box/Passenger's airbag deactivation/Audio/video sockets.
9. Heated seat control.
10. Front ashtray.
11. 12 V accessories socket.
12. USB port.
13. Dynamic stability control (ESP/ASR) button.  
Central locking button.  
Alarm button.  
Electric child lock button.
14. Heating/air conditioning controls.
15. Storage compartment.
16. Peugeot Connect Sound or Peugeot Connect Navigation.
17. Central adjustable air vents.

## FAMILIARISATION

### SITTING COMFORTABLY

#### Front seat adjustment



1. Forwards-backwards adjustment.
  2. Height adjustment.
  3. Seat back angle adjustment.
  4. Head restraint height adjustment.
- » 50



#### Also...

5. Access to the rear seats (3-door).
6. Armrest (except 3-door).
7. Heated seat.

#### Steering wheel adjustment



1. Unlocking the control.
2. Adjustment for height and reach.
3. Locking the control.

As a safety precaution, these operations must only be carried out when stationary.

» 57

SITTING COMFORTABLY

Door mirror adjustment




- A. Selecting the mirror.
  - B. Adjusting the position of the mirror.
  - C. De-selecting the mirror.
- » 55



**Also...**  
D. Folding/Unfolding.

Rear view mirror adjustment

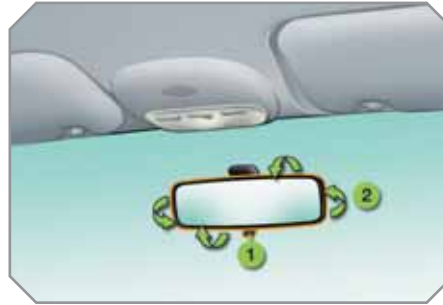

- 1. Selecting the "day" position of the mirror.
  - 2. Adjusting the mirror.
- » 56

Front seat belts



- 1. Fastening.
  - 2. Height adjustment.
- » 104

## FAMILIARISATION

### SEEING CLEARLY

#### Lighting



#### Ring A


**0** Lighting off.

**AUTO** Automatic illumination of headlamps.

 Sidelamps.

 Dipped/main beam headlamps.

#### Ring B


 Rear foglamps.

or

 Front and rear foglamps.

» 81

#### Wipers

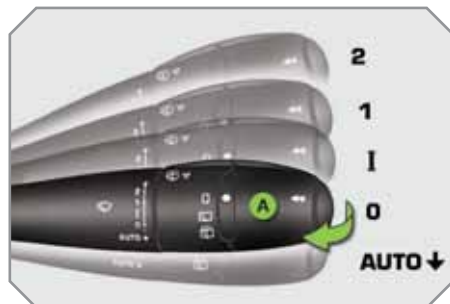

#### Control A: windscreen wipers

**2.** Fast wipe.

**1.** Normal wipe.

**I.** Intermittent wipe.

**0.** Park.

**AUTO ↓** Automatic wiping or single wipe.

Wash-wipe: pull the control towards you.

» 85



#### Switching on "AUTO" mode

☞ Push the control downwards and release it.

#### Switching off "AUTO" mode

☞ Push the control upwards and return it to position "0".

» 87

#### Ring B: rear wiper

**0** Park.

 Intermittent wipe.

 Wash-wipe.

» 86

VENTILATION

Advice on interior settings

I require...	Heating or Manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Exterior air intake	Temperature	Manual A/C
HEAT					—
COOL					ON
DEMISTING DEFROSTING					ON

**Digital air conditioning:** use of the fully automatic mode by pressing the "AUTO" button is recommended.

## FAMILIARISATION

### MONITORING

#### Instrument panel



- A. With the ignition on, the fuel gauge needle should rise.
- B. With the engine running, the associated low level warning lamp should switch off.
- C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the level which is low.

» 18

#### Warning lamps



1. With the ignition on, the orange and red warning lamps come on.
2. With the engine running, these warning lamps should switch off.

If a warning lamp remains on, refer to the page concerned.

» 19

#### Switch panel



Lighting of the indicator lamp indicates the status of the corresponding function.

- A. Deactivation of the ESP/ASR system.  
» 103
- B. Central locking.  
» 66
- C. Deactivation of the interior volumetric protection alarm.  
» 70
- D. Activation of the electric child lock\*.  
» 98

\* Except 3-door.

**PASSENGER SAFETY**

**Front passenger's airbag**



1. Open the glove box.
  2. Insert the key.
  3. Select position:  
"ON" (activation), with front passenger or "forwards facing" child seat,  
"OFF" (deactivation), with "rear facing" child seat".
  4. Remove the key keeping the switch in the new position.
- » 108


**Front and rear seat belts**



- A. Front left seat belt not fastened or unfastened warning lamp lit in red.
  - B. Front right seat belt not fastened or unfastened warning lamp lit in red.
  - C. Rear left seat belt not fastened or unfastened warning lamp lit in red.
  - D. Rear centre seat belt not fastened or unfastened warning lamp lit in red.
  - E. Rear right seat belt not fastened or unfastened warning lamp lit in red.
- » 105

**START**

**Ignition switch**

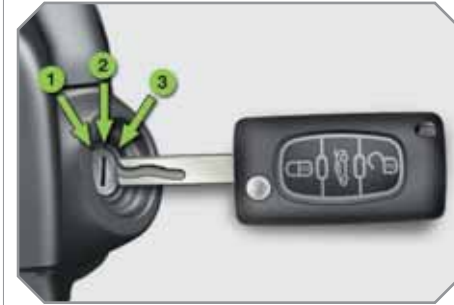

1. **Stop** position.
  2. **Ignition** position.
  3. **Starting** position.
- » 68

**!** A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

## FAMILIARISATION

### DRIVING SAFELY

#### Speed limiter "LIMIT"



1. Selecting/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.

The values must be set with the engine running.

» 119

#### Cruise control "CRUISE"



1. Selecting/Switching off cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Cruise control Off/Resume.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear on the "2 Tronic" or automatic gearbox).

» 121

#### Instrument panel display



The cruise control or speed limiter mode appears on the instrument panel when it is selected.



**Cruise control**



**Speed limiter**

DRIVING SAFELY

"2 Tronic" gearbox (Saloon)



This five-speed electronically controlled gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

1. Gear lever.
2. Steering wheel "-" paddle.
3. Steering wheel "+" paddle.

Display on the instrument panel



The gear or the driving mode selected appears on the instrument panel.

**N:** neutral.

**R:** reverse.

**1 2 3 4 5:** gears engaged.

**AUTO:** automatic mode.

**\***: "snow" automatic mode.

Moving off



☞ Select position **N** and press the brake pedal firmly while starting the engine.

☞ Engage first gear (position **A** or **M**) or reverse (position **R**) using the gear lever **1**.

☞ Release the parking brake.

☞ Take your foot off the brake pedal, then accelerate.

» 113