


Handbook

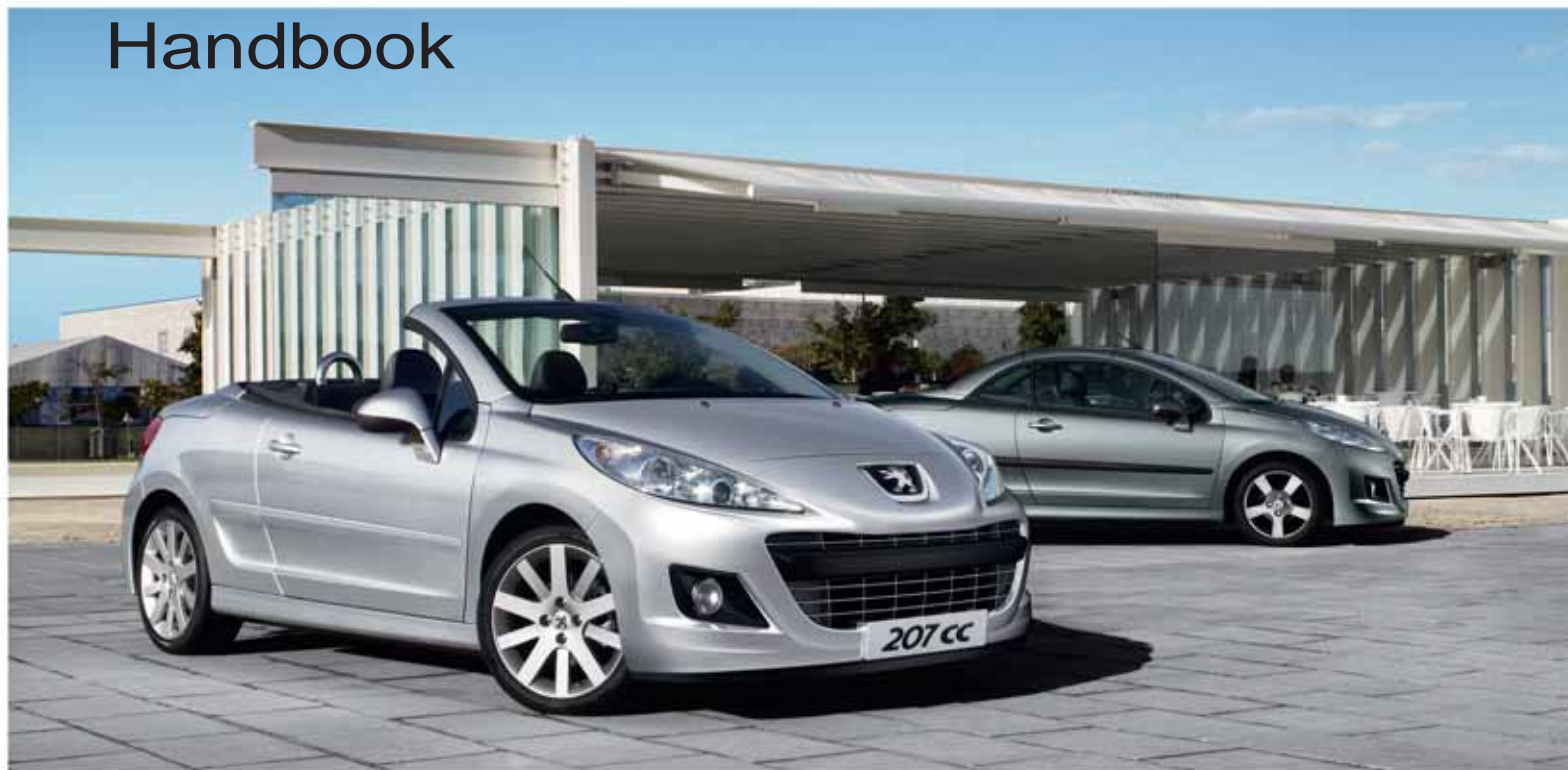

207 CC



FAMILIARISATION

EXTERIOR

Retractable roof

This system enables you to change the vehicle from "coupé" to "cabriolet" configuration and vice versa with a single action.

» 6

Visual and audible rear parking sensors

This system provides a warning when reversing by detecting obstacles located behind the vehicle.

» 111

Turbulence prevention net (Windstop)

In "cabriolet" configuration, this system reduces the wind turbulence in the front seats.

» 60

Static directional lighting

This additional lighting automatically provides extended visibility when turning.

» 80

Under-inflation detection

This system monitors the pressure in each tyre and warns you of a puncture or drop in pressure.

» 92

Temporary tyre repair kit


This kit is a complete system, consisting of a compressor and an integral sealant, for the temporary repair of a tyre.

» 120



OPENING

Remote control key

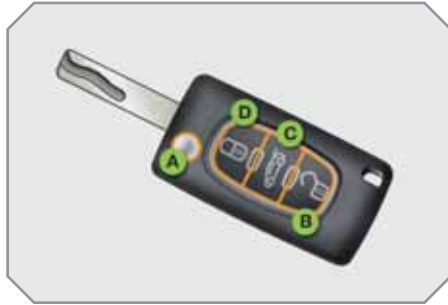


- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.
- C. Unlocking and partially opening the boot.

» 63

i Also...

- D. Normal locking or Deadlocking of the vehicle.

Boot
From outside

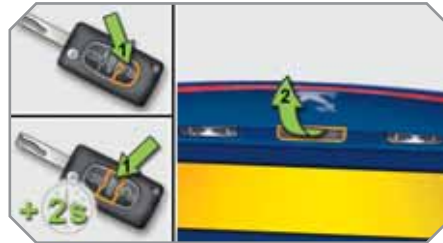

- 1. Unlocking the complete vehicle or unlocking the boot and the vehicle.
- 2. Opening the boot lid.

From inside



- 1. Key in the ignition switch.
- 2. Unlocking using the manual centralised control or the door opening control.

» 74

Fuel tank



- 1. Opening the fuel filler flap.
- 2. Opening and hooking the fuel filler cap.

Capacity of the tank : approximately 50 litres (petrol) or 48 litres (Diesel).

» 75

i On Diesel vehicles, the fuel tank opening incorporates a misfuel prevention device which prevents filling with petrol.

» 76

FAMILIARISATION

OPENING

Retractable roof

Precautions to be taken before operating the roof

- ☞ Park the vehicle on level ground.
- ☞ Check that no object could hinder the operation of the roof:
 - nothing should be placed on the moving rear shelf **1** or on the net **2**.
 - if luggage is being carried in the boot, it must not raise the net,
- ☞ Ensure that the net **2** is secure.
- ☞ Close the boot correctly.



The roof is operated under the sole responsibility of the driver. During operation of the roof, to avoid the risk of injury, ensure that no one is in the vicinity of the moving parts.

You are strongly advised not to operate the roof in strong winds.



When washing your vehicle:

- lock the vehicle,
- avoid spraying the upper part of the windows,
- keep the end of the high-pressure nozzle at least 1 metre from the windows and door seals.

After washing the vehicle or following rain, wait until the roof has dried before opening it.

Preliminary conditions

- ☞ Switch on the ignition.
- ☞ Ensure that:
 - the vehicle is not in energy economy mode (refer to the corresponding section),
 - the battery voltage is sufficient (switching on of the indicator lamp on the roof control),
 - the roof fuse is in good condition (refer to the corresponding section),
 - the electric windows are initialised (refer to the corresponding section),
 - the ambient temperature is above -15°C .



It is preferable to operate the roof with the engine running.

The roof can be operated at speeds below 6 mph (10 km/h).

It is only possible to carry out the operation twice with the engine off, to avoid discharging the battery.

Maintenance

Carry out a complete opening and closing operation of the roof at least once a month to keep it in good working order.

OPENING

Retractable roof operation

Opening the roof



Pull this control until the roof is fully open.

The end of the operation is confirmed by an audible signal and a message on the multifunction screen.

Closing the roof



Press this control until the roof is fully closed.

The end of the operation is confirmed by an audible signal and a message on the multifunction screen.



Changing to "cabriolet" configuration:

- the four windows lower,
- the boot opens,
- the roof folds into the boot,
- the boot closes.

Changing to "coupé" configuration:

- the four windows lower,
- the boot opens,
- the roof opens out and locks automatically,
- the boot closes.



Do not release the roof control during operation of the roof.

However, in the event of danger, release the control, the roof stops; then, when the danger is no longer present, complete the required operation.

If the operation has not completely finished, you will be warned by an audible signal and a message on the multifunction screen. These will be repeated as the vehicle passes a number of speed thresholds.



Operating fault

If a malfunction of the roof occurs, apply the parking brake, switch off the ignition, restart the engine, then start the required operation again.

If the problem persists, contact a PEUGEOT dealer.



If you continue to pull or press this control after the end of the operation, the four windows rise.

The electric window controls and the control for the four windows are deactivated during operation of the roof.

The roof electronic control unit may interrupt the operation in progress as a precaution (for example: door movement and roof operation in quick succession). In this case, release the control then operate it again to complete the required operation.

FAMILIARISATION

INTERIOR

Electric windows

On the driver's side, control of the electric window is automatic when opening and when closing.

» 69

Automatic gearbox

This system provides perfect driving pleasure by combining a fully automatic mode, associated with two special programmes, and a manual mode.

» 104

Audio and communication systems

These systems benefit from the latest technology: MP3 compatible Peugeot Connect Sound, Peugeot Connect USB, Bluetooth hands-free system, Peugeot Connect Navigation with 16/9 colour screen, JBL audio system, auxiliary sockets.

Peugeot Connect Navigation

» 149

Peugeot Connect Sound

» 179

Peugeot Connect USB

» 186

Dual-zone digital air conditioning

This system allows different levels of comfort to be set for the driver and the front passenger. It then automatically controls these levels according to the ambient conditions.

» 48



INSTRUMENTS AND CONTROLS



1. Cruise control/speed limiter switches.
2. Steering wheel adjustment control.
3. Lighting and direction indicator control stalk.
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear lever.
7. Parking brake.
8. Retractable roof control.
Control for the four windows.
9. Bonnet release lever.
10. Door mirror controls.
Electric window controls.
11. Fusebox.
12. Headlamp height adjustment.
13. Side adjustable air vent.
14. Door window demisting vent.
15. Speaker (medium tweeter).
16. Windscreen demisting vent.

FAMILIARISATION

INSTRUMENTS AND CONTROLS



1. Steering lock and ignition.
2. Audio equipment steering mounted controls.
3. Wiper/wash-wipe/trip computer control stalk.
4. Hazard warning lamps switch.
5. Multifunction screen.
Seat belt fastening status warning lamps.
6. Sunshine sensor.
7. Passenger's airbag.
8. Glove box/Passenger's airbag deactivation/Audio/video sockets.
9. Heated seat control.
10. 12 V accessories socket.
11. USB port.
12. Dynamic stability control (ESP/ASR) button.
Central locking button.
Alarm button.
13. Heating/air conditioning controls.
14. Storage compartment.
15. Audio and telematics system.
16. Central adjustable air vents.

SITTING COMFORTABLY

Front seat adjustment



1. Forwards-backwards adjustment.
 2. Height adjustment.
 3. Seat back angle adjustment.
 4. Head restraint height adjustment.
- » 50



- Also...**
5. Access to the rear seats.
 6. Heated seat.

Steering wheel adjustment



1. Unlocking the control.
2. Adjustment for height and reach.
3. Locking the control.



As a safety precaution, these operations must only be carried out while stationary.

» 52

FAMILIARISATION

SITTING COMFORTABLY

Door mirror adjustment



- A. Selecting the mirror.
- B. Adjusting the position of the mirror.
- C. De-selecting the mirror.


» 53



Also...

- D. Folding/Unfolding.

Rear view mirror adjustment

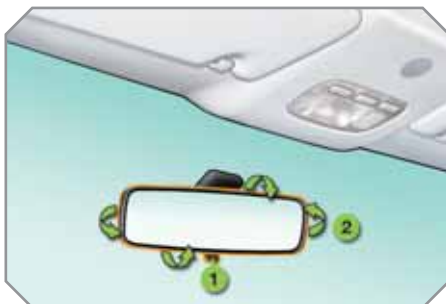

1. Selecting the "day" position of the mirror.
2. Adjusting the mirror.

» 54



Front seat belts




- A. Installing the strap.
- B. Fastening the buckle.
- C. Checking the fastening by pulling the strap.

» 95

SEEING CLEARLY

Lighting

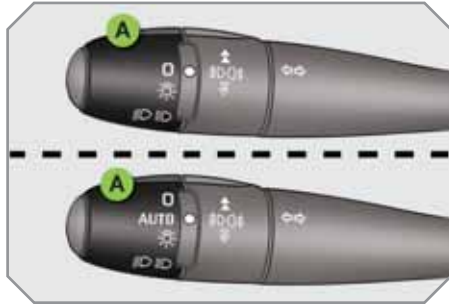

Ring A

- Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

» 77



Ring B

- Front and rear foglamps.

» 78

Wipers



Stalk A: windscreen wipers

- 2. Fast wipe.
- 1. Normal wipe.
- I. Intermittent wipe.
- 0. Park.
- ↓ Single wipe.

Screenwash: pull the stalk towards you.

» 81

i Automatic wiping is not currently available on the 207 CC.

FAMILIARISATION

VENTILATION

Advice on interior settings

I require...	Heating or Manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Exterior air intake	Temperature	Manual A/C
HEAT					—
COOL					ON
DEMISTING DEFROSTING					ON

Digital air conditioning: use of the fully automatic mode by pressing the "AUTO" button is recommended.

MONITORING

Instrument panel



- A. With the ignition on, the fuel gauge needle should rise.
- B. With the engine running, the associated low level warning lamp should switch off.
- C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the level which is low.

» 18

Warning lamps



1. With the ignition on, the orange and red warning lamps come on.
 2. With the engine running, these warning lamps should switch off.
- If a warning lamp remains on, refer to the page concerned.

» 19

Switch panel



Lighting of the indicator lamp indicates the status of the corresponding function.

- A. Deactivation of the ESP/ASR system.
» 94
- B. Central locking.
» 72
- C. Deactivation of the interior volumetric protection alarm.
» 67

FAMILIARISATION

PASSENGER SAFETY

Front passenger's airbag



1. Open the glove box.
2. Insert the key.
3. Select position:
"ON" (activation), with front passenger or "forwards facing" child seat,
"OFF" (deactivation), with "rear facing" child seat.
4. Remove the key keeping the switch in the new position.

» 99

Front seat belts



- A. Front left seat belt not fastened or unfastened warning lamp lit in red.
- B. Front right seat belt not fastened or unfastened warning lamp lit in red.

» 95

START

Ignition switch



1. **Stop** position.
2. **Ignition** position.
3. **Starting** position.

» 65



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

DRIVING SAFELY

Speed limiter "LIMIT"



1. Selecting/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.

The values must be set with the engine running.

» 107

Cruise control "CRUISE"



1. Selecting/Switching off cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Off/return to cruise control.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear on the automatic gearbox).

» 109

Instrument panel display



The cruise control or speed limiter mode appears on the instrument panel when it is selected.



Cruise control



Speed limiter