



*308 CC*



Handbook

# FAMILIARISATION

## EXTERIOR

### Directional lighting

This lighting automatically provides additional visibility when cornering.

» 84

### Retractable roof

This equipment changes from the "coupé" configuration to the "cabriolet" configuration and vice versa with a single action.

» 6

### Temporary tyre repair kit

This kit is a complete system, consisting of a compressor and an integrated sealant product, for the temporary repair of a tyre.

» 135

### Welcome lighting

This additional exterior and interior lighting, controlled remotely, makes your approach to the vehicle easier when the light is poor.

» 83, 88

### Windstop

In the "cabriolet" configuration, this comfort system reduces air swirl at the front seats.

» 54



## OPENING

### Remote control key



A. Unfolding/Folding of the key.



Normal locking  
(press once; fixed lighting of  
the direction indicators).

or



Deadlocking of the vehicle  
(press twice in succession;  
fixed lighting of the direction  
indicators).

Locking the vehicle using the remote control or the key also locks the glove box and the front armrest.

» 65



Unlocking and partial opening  
of the boot  
(press for more than two seconds).



Complete or selective unlocking  
of the vehicle  
(rapid flashing of the direction  
indicators).

When the light is poor, detected by a sensor, the remote switching on of the dipped beam headlamps, sidelamps and side spotlamps makes your approach to the vehicle easier.


» 83



In the same way, the passenger compartment lighting, such as the courtesy lamps, the door sill lamps and the footwell lamps, comes on.

» 88

### Fuel tank

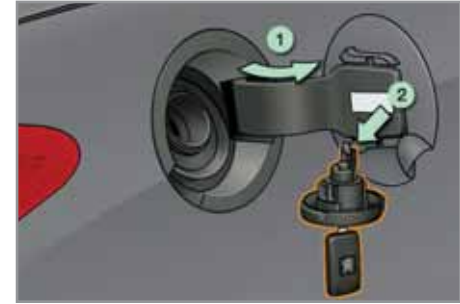

1. Opening of the fuel filler flap.
2. Opening and hooking of the fuel tank cap.

Capacity of the tank: approximately 60 litres.

» 78

# FAMILIARISATION

## OPENING

### Retractable roof

#### Precautions to be taken before operating the roof

- ☞ Park the vehicle on level ground.
- ☞ Check that no objects could hinder the operation of the roof:
  - nothing should be placed on the moving rear shelf 1, on the boot screen 2 or on the side trims 3,
  - if luggage is transported in the boot, it must not lift the boot screen,
  - any objects, such as a jacket or umbrella, placed in the boot, must be secured using the luggage retaining net 4.
- ☞ Check that the boot screen 2 is secured firmly.
- ☞ Close the boot correctly.



**!** The operation of the roof is the exclusive responsibility of the driver. To avoid any risk of injury when operating the roof, ensure that no one is standing near the moving parts. You are strongly advised not to operate the roof in strong winds.

**!** When washing your vehicle:

- lock the vehicle using the remote control or the key,
- avoid spraying the upper part of the windows,
- keep the end of the high pressure nozzle at least 1 metre from the windows and door seals.

When the vehicle has been washed or after rain, wait until the roof has dried before opening it.

#### Preliminary conditions

- ☞ Switch on the ignition.
- ☞ Make absolutely sure that:
  - the vehicle is not in energy economy mode (refer to the corresponding section),
  - the battery voltage is sufficient (switching on of the roof control indicator lamp),
  - the roof fuse is in good condition (refer to the corresponding section),
  - the electric windows are initialised (see corresponding section),
  - the ambient temperature is higher than -15 °C.

**i** It is preferable to operate the roof with the engine running and the vehicle stationary. Wait until the end of operation message appears on the multifunction screen before moving off. The roof can be operated at a speed below 6 mph (10 km/h). After the roof has been operated fully four times in succession, the system switches to protection mode temporarily to avoid damage to the roof motors. Let the system rest for approximately ten minutes; if you are unable to operate the roof after this time, contact a PEUGEOT dealer.

## OPENING

### Retractable roof operations

#### Opening the roof



Pull this control until the roof opening operation is complete.

The end of the operation is confirmed by an audible signal and a message on the multifunction screen.



#### Closing the roof



Press this control until the roof closing operation is complete.

The end of the operation is confirmed by an audible signal and a message on the multifunction screen.



#### Change to "cabriolet" configuration:

- the four windows lower partially,
- the boot opens,
- the roof folds into the boot,
- the boot closes.

#### Change to "coupé" configuration:

- the four windows lower partially,
- the boot opens,
- the roof unfolds and locks automatically,
- the boot closes.

**i** If you continue to pull or press this control after the end of the operation, the four windows rise.

**!** To ensure that the roof operates correctly, do not release the control while the roof is moving.  
However, in the event of any danger, release the control, the roof stops; then, once the danger had been eliminated, complete the movement required.

#### **!** Operating fault

If a malfunction of the roof occurs, apply the parking brake, switch off the ignition, start the engine again, then start the operation required again.

If the problem persists, contact a PEUGEOT dealer.

**i** The electric window controls and the control for all four windows are deactivated while the roof is in operation.

**!** The roof's electronic control unit may interrupt the operation in progress as a precaution (example: door movement and roof operation in quick succession). In this case, release the control, then activate it again to complete the operation required.

## FAMILIARISATION

### INTERIOR

#### Ambiance lighting

This dimmed lighting of the passenger compartment facilitates visibility inside the vehicle when the light is poor.

» 88

#### Audio and telematics systems

This equipment benefits from the latest technology: MP3 compatible PC Sound, PC Bluetooth, PC Nav or PC Com 3D with 16/9 retractable colour screen, JBL audio system, auxiliary sockets.

**PC Sound** » 239

**PC Nav** » 213

**PC Com 3D** » 173

#### "AIRWAVE" system

Incorporated in each front head restraint, this heating system improves your comfort around the neck in cold weather, particularly in the "cabriolet" configuration. It operates most effectively with the windstop installed in the raised position.

» 60

#### Secure storage compartments


The glove box and the front armrest are designed to remain locked, even in the "cabriolet" configuration. They can only be locked using the remote control or the key at the same time as the rest of the vehicle.

» 90, 91



## FAMILIARISATION

### INSTRUMENTS AND CONTROLS

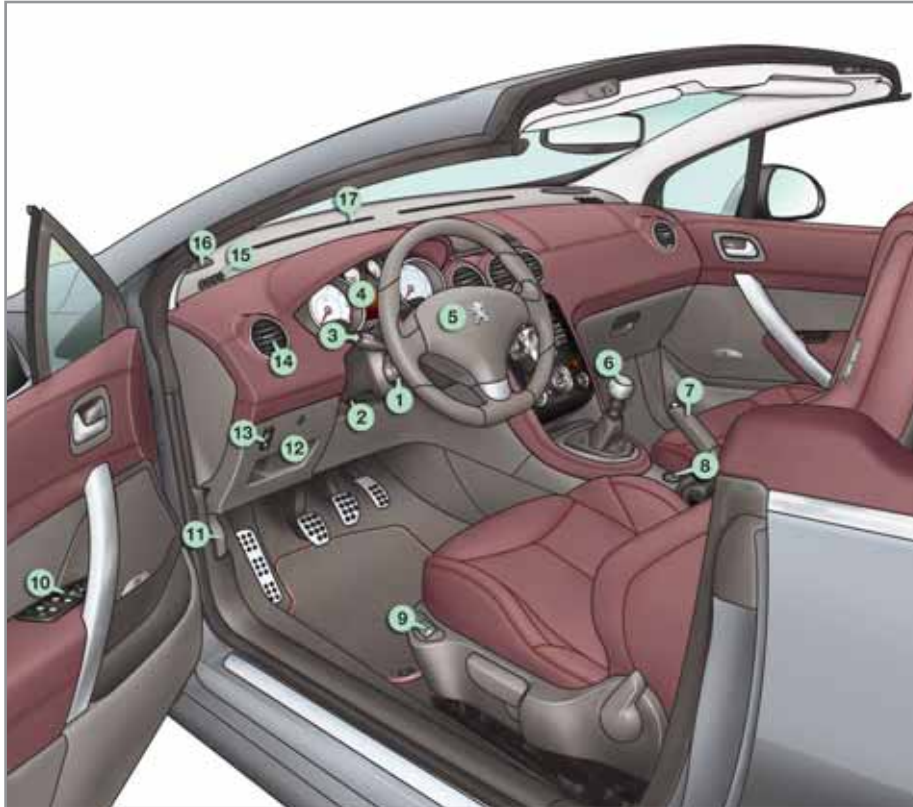

1. Cruise control/speed limiter switches.
2. Steering wheel adjustment control.
3. Lighting and direction indicators control stalk.
4. Instrument panel.
5. Driver's airbag.  
Horn.
6. Gear lever.
7. Parking brake.
8. 12 V accessories socket.
9. Heated seat control.
10. Exterior mirror controls.  
Electric window controls.
11. Bonnet release.
12. Fusebox.
13. Manual headlamp height adjustment.
14. Side adjustable air vent.
15. Front side window demisting vent.
16. Speaker (tweeter).
17. Windscreen demisting vent.

# FAMILIARISATION

## INSTRUMENTS AND CONTROLS



1. Steering lock and ignition.
2. Audio and telematics system steering wheel control stalk.
3. Wipers/wash-wipe/trip computer control stalk.
4. Central adjustable air vents.
5. Multifunction screen.
6. Sunshine sensor.
7. Passenger airbag.
8. Passenger airbag deactivation switch.
9. Glove box/Audio/video sockets.
10. Retractable roof control.  
Control for all four windows.
11. Storage compartment or instrument panel navigator associated with the PC Com 3D.
12. "AIRWAVE" system controls.
13. Front armrest.
14. Front ashtray.
15. Heating/air conditioning controls.
16. Audio and telematics system.
17. Emergency call button.  
Alarm button.  
Central locking button.  
Hazard warning lamps button.  
Dynamic stability control (ESP/ASR) button.  
Parking assistance button.  
PEUGEOT services button.

## SITTING COMFORTABLY

### Front seats

#### Forwards-backwards



#### Height



#### Seat back angle




#### Manual adjustments

» 57



#### Electric adjustments

» 58

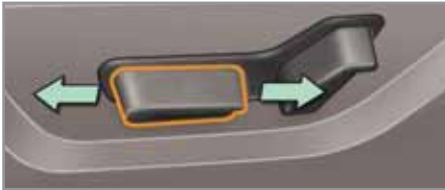

# FAMILIARISATION

## SITTING COMFORTABLY

### Front seats

#### Electric access to the rear seats



1. Control for release of the seat back and automatic forward movement of the seat.
2. Control for return of the seat to the initial position.

» 59

#### **i** Other functions available...

Storing driving positions (driver's electric seat).

» 61

"AIRWAVE" system.

Heated seats.

» 60

### Steering wheel adjustment





1. Release the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.



As a safety precaution, these operations must only be carried out when stationary.

» 64

### Lockable front armrest

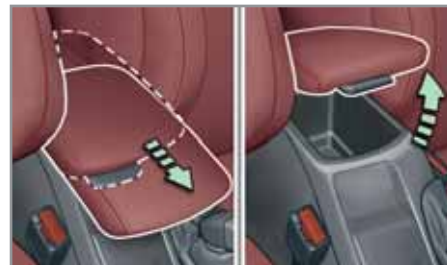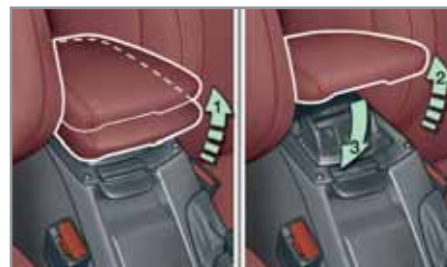

For your comfort, the height and the longitudinal position of the front armrest can be adjusted.

It also offers a storage compartment. As a security measure when in the "cabriolet" configuration, this is locked at the same time as the rest of the vehicle, using the remote control or the key only.

» 91

## SITTING COMFORTABLY

### Exterior mirrors

#### Adjustment



- A. Selection of the mirror to be adjusted.
- B. Adjustment of the position of the mirror in all four directions.
- C. De-selection of the mirror.

» 62



#### Other functions available...

Folding/Unfolding.  
Automatic tilting of the mirror in reverse gear for parking.

» 63

### Interior mirror

#### Manual model



1. Selection of the "day" position of the mirror.
2. Mirror orientation.

» 63



#### Automatic day/night model

1. Automatic detection of the day/night mode.
2. Mirror orientation.

» 64

### Front seat belts



- A. Position the strap.
- B. Fasten the buckle.
- C. Check the fastening by pulling the strap.

» 101

# FAMILIARISATION

## SEEING CLEARLY

### Lighting




#### Ring A


**0** Lighting off.

**AUTO** Automatic lighting.

 Sidelamps.

 Dipped/main beam headlamps.

#### Ring B

 Front and rear foglamps.

» 80

### Direction indicators



Raise or lower the lighting stalk passing the point of resistance; the corresponding direction indicators will flash until the stalk is moved from this position.


#### "Motorway" function

Press the lighting stalk up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

The use of this function is available regardless of the speed, but you will find it particularly useful when changing lane on fast roads.

» 95

### Wipers

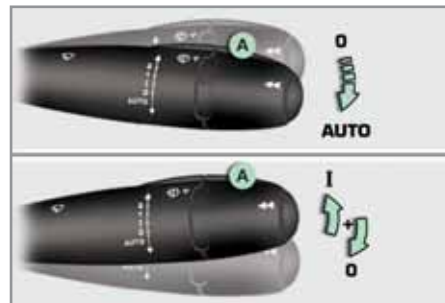

#### Stalk A: windscreen wipers

» 85

#### Switching on "AUTO"

☞ Press the stalk down and release it.














#### Switching off "AUTO"

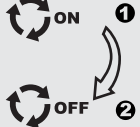☞ Push the stalk up and return it to position "0".

» 86
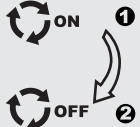
## VENTILATION

### Recommended interior settings

 I require...	Manual Air Conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of outside air	Temperature	Manual A/C
HOT					
COLD					<b>ON</b>
DEMISTING DEFROSTING					<b>ON</b>

#### Automatic air conditioning

We recommend use of the fully automatic mode by pressing the **"AUTO"** button. In the "cabriolet" configuration, the system automatically adapts to the exterior climatic conditions.

# FAMILIARISATION

## MONITORING

### Instrument panel



- A. With the ignition on, the needle should indicate the level of fuel remaining.
- B. With the engine running, its associated low level warning lamp should switch off.
- C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the levels which are low.

» 19


### Warning lamps



1. With the ignition on, the orange and red warning lamps come on.
  2. With the engine running, these warning lamps should switch off.
- If warning lamps remain on, refer to the page concerned.

» 23

### Switch panel

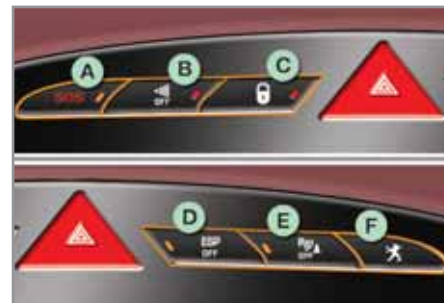


Lighting of the indicator lamp indicates the status of the corresponding function.

- A. Emergency call in progress.  
» 169
- B. Deactivation of the interior protection alarm.  
» 70
- C. Central locking.  
» 75
- D. Deactivation of the ESP/ASR system.  
» 99
- E. Deactivation of the front and rear parking assistance.  
» 126
- F. Access to the PEUGEOT services.  
» 169

## PASSENGER SAFETY

### Passenger's front airbag

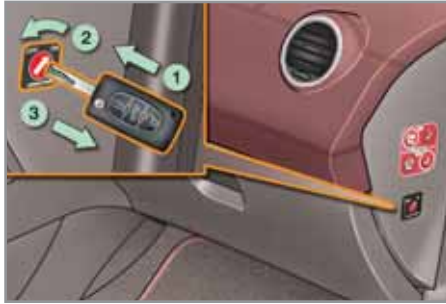

1. Insertion of the key.
2. Selection of the position:  
"OFF" (deactivation), with "rear facing" child seat,  
"ON" (activation), with front passenger or "forwards facing" child seat.
3. Removal of the key keeping the switch in the new position.

» 104

### Seat belts and passenger's front airbag



- A. Front and/or rear seat belts not fastened/unfastened warning lamp.
- B. Front left seat belt warning lamp.
- C. Front right seat belt warning lamp.
- D. Rear right seat belt warning lamp.
- E. Rear left seat belt warning lamp.
- F. Passenger's front airbag deactivated warning lamp.
- G. Passenger's front airbag activated warning lamp.

» 101, 105

## STARTING

### Ignition switch



1. **Stop** position.
2. **Running** position.
3. **Starting** position.



Avoid attaching any heavy objects to the key which would weigh down on its shaft in the ignition switch; this could cause a malfunction.

» 68

# FAMILIARISATION

## DRIVING SAFELY

### Speed limiter "LIMIT"



1. Limiter mode Selection/Off.
2. Decreasing of the programmed value.
3. Increasing of the programmed value.
4. Speed limiter On/Off.

The values must be set with the engine running.

» 120

### Cruise control "CRUISE"



1. Cruise control mode Selection/Off.
2. Programming a speed/Decreasing of the programmed value.
3. Programming a speed/Increasing of the programmed value.
4. Cruise control Off/Resume.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear for the automatic gearbox).

» 122

### Display in the instrument panel



The cruise control or speed limiter mode appears on the instrument panel when it is selected.



**Cruise control**



**Speed limiter**