

Handbook



4007



FAMILIARISATION

EXTERIOR

Sunroof

This roof improves the ventilation and light in the passenger compartment.

» 82

Reversing camera

This equipment is activated automatically when reverse gear is engaged providing a visual return on the colour display.

» 125



Audible rear parking assistance

This equipment warns you if an obstacle is detected behind the vehicle when reversing.

» 124

Lower tailgate

This lower tailgate provides remarkable accessibility and makes the loading of bulky objects easier.

» 81

FAMILIARISATION

OPENING

Remote control key



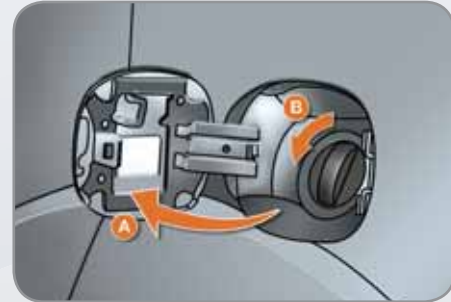
- A. Unfolding/folding of the key.
- B. Unlocking of the vehicle.
- C. Locking of the vehicle.

Manual centralised control



1. Locking of the vehicle.
2. Unlocking of the vehicle.

Fuel tank



- A. Opening of the fuel filler flap.
- B. Opening of the fuel tank cap.

Capacity of the tank: approximately 60 litres.

i When refitting the cap, insert the upper part first turning it to the right.

» 73

» 79

» 84

FAMILIARISATION

OPENING

Tailgate



Opening

- ☞ After unlocking the vehicle using the remote control or the key, press the handle **A** and raise the tailgate.

Closing

- ☞ Pull the handle **B** downwards.

Lower tailgate



Opening

- ☞ Push the handle **C** to the right and tilt the tailgate **D** gently.

Closing

- ☞ Raise the tailgate **D**, push it to close it, then check that it is secured correctly.



The maximum authorised weight on the lower tailgate when open is **200 kg**.

Spare wheel and tools



Access to the spare wheel

- ☞ Remove the plastic cover **E** to gain access to the spare wheel fixing system.

Access to the tools

The tools are stored in the storage compartment **F** in the boot right-hand trim.

FAMILIARISATION

CONFIGURING

Rear seats (row 2)



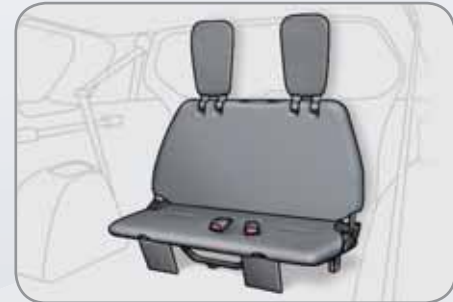
Forwards-backwards adjustment



Head restraint height adjustment

» 52

Rear bench seat (row 3)



The rear bench seat can be folded. It retracts into a location in the floor of the vehicle.



Seat back angle adjustment

» 53



Access to the third row (7-seat version)

» 54

» 58

FAMILIARISATION

INTERIOR

Automatic air conditioning

This automatic air conditioning system guarantees comfort and a sufficient circulation of air in the passenger compartment.

» 46

Audio and communication systems

This equipment benefits from the latest technology: MP3 compatible audio equipment, Bluetooth hands-free telephone, colour display...

» 162

Cruise control

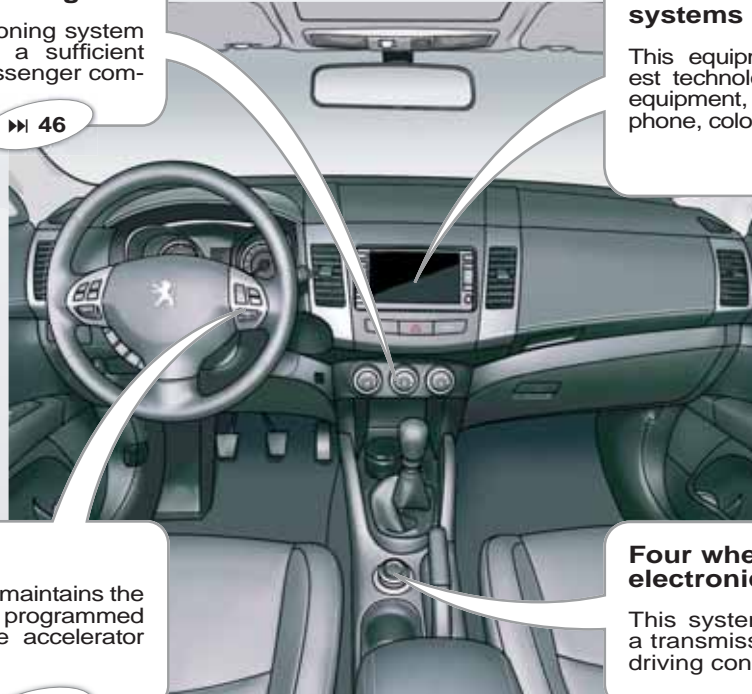
This system automatically maintains the vehicle speed at the value programmed by the driver, without the accelerator pedal being pressed.

» 122

Four wheel drive system with electronic control

This system permits the selection of a transmission mode in relation to the driving conditions.

» 120



FAMILIARISATION

INSTRUMENTS AND CONTROLS



1. Audio equipment controls.
2. Telephone controls.
3. Steering wheel adjustment control.
4. Lights and direction indicators controls.
Headlamp wash control.
5. Instrument panel.
6. Driver's air bag.
Horn.
7. Cruise control switches.
8. Gear lever.
9. Handbrake.
10. Bonnet release.
11. Enclosed storage compartment.
Fuse box.
12. Headlamp height adjustment.
Deactivation of the ASC system.
Deactivation of the audible parking assistance.
13. Cup holder.
14. Side adjustable and closing vent.
15. Information button.
16. Window de-icing and demisting vent.
17. Windscreen de-icing vent.

FAMILIARISATION

INSTRUMENTS AND CONTROLS



1. Steering lock and ignition.
2. Exterior mirror controls.
Electric window and rear electric window deactivation controls.
3. Front and rear wipers/wash-wipe control.
4. Central adjustable and closing vents.
5. Sunshine sensor.
6. Upper glove box with air conditioning.
7. Lower glove box with lock.
Passenger air bag disarming.
8. Heated seat controls.
9. Armrest with storage compartments.
12 volt socket (120 W max).
10. Cup holder.
11. Four wheel drive system position selector.
12. Removable ashtray/
12 volt socket (120 W max).
13. Automatic air conditioning controls.
14. Temperature sensor.
15. Hazard warning lights switch.
16. Colour display/Audio equipment.

SITTING COMFORTABLY

Front seats

Manual adjustments



Forwards-backwards



Driver's seat cushion height and angle



Seat back angle

» 50

Electric adjustments (driver's seat only)



Forwards-backwards



Seat cushion height and angle



Seat back angle

» 51

FAMILIARISATION

SITTING COMFORTABLY

Manual steering wheel height adjustment



1. Unlocking of the lever.
2. Locking of the lever.
3. Adjustment of the height of the steering wheel.

» 62

Exterior mirror adjustment



- A. Selection of the mirror.
- B. Adjustment of the position of the mirror.
- C. Folding/Unfolding.

» 61

Interior mirror adjustment



- D. Control for selection of the "day/night" position of the mirror.

» 62

Front seat belt



1. Fastening.



» 106

SITTING COMFORTABLY

Ignition switch



1. **LOCK** position.
2. **ACC** position.
3. **ON** position.
4. **START** position.



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

» 75

Electric window controls



1. Driver's electric window control.
2. Passenger's electric window control.
3. Rear right electric window control.
4. Rear left electric window control.



Also...

5. Deactivation of the front passenger and rear electric window controls.

» 77

Sunroof controls



1. Opening control.
2. Closing control.
3. Partial opening control.



Also...

3. Also permits temporary stopping of sunroof opening/closing.

» 82

 
 
 
 
FAMILIARISATION

SEEING CLEARLY


Lighting



Ring A

-  Lights off.
-  Automatic switching on of the lights.
-  Side lights.
-  Dipped or main beam headlamps.






 
Ring B

-  Front fog lamps and rear fog lamps.

Wipers



 


Windscreen wipers

-  Single wipe.
-  Park.
-  Intermittent (speed which can be adjusted manually).
or
-  Automatic (speed which can be adjusted manually).
-  Slow.
-  Fast.



Rear wiper

-  Park.
-  Intermittent wipe.
-  Wiping with screen wash.

» 86

» 92

» 93

VENTILATING

Automatic air conditioning



Temperature adjustment.



Exterior air intake.
Interior air recirculation.



Air flow adjustment.



Automatic programme (comfort).



Deactivation of the air conditioning.



Air distribution adjustment.



Front visibility control.



Rear screen de-icing.

FAMILIARISATION

MONITORING

Instrument panels



Type 1



Type 2

- A. Speedometer.
- B. Instrument panel display.
- C. Rev counter.
- D. Fascia lighting rheostat.

» 19, 20

Warning lights



When the ignition is on, the orange and red warning lights come on.

When the engine is running, these warning lights should switch off.

If warning lights remain on, refer to the page concerned.

» 21

Detection of fastening of the driver's seat belt



When the **ignition is switched on**, the **seat belt warning light** comes on accompanied by an audible signal if the driver has not fastened his seat belt.

The warning light switches off when the seat belt is fastened.

» 23

Controls bar



A. Passenger air bag disarmed warning light.

» 110

B. Hazard warning lights switch.

» 103

C. Front passenger's seat belt not fastened or unfastened warning light.

» 107

KEEPING YOUR PASSENGERS SAFE

Front passenger air bag



1. Insertion of the key.
2. Selection of the "OFF" position.
3. Removal of the key.

Child lock



This prevents opening of the door concerned from the inside.
Lower or raise the control **A** to lock or unlock.

Isofix mounting



Two rings **A**, located between the seat back and seat cushion of the vehicle's seat, permit the securing of a child seat.



A ring **B** permits securing of the upper strap referred to as the **TOP TETHER**.

» 110

» 102

» 99

FAMILIARISATION

DRIVING SAFELY

Four wheel drive system



Three transmission modes are available and can be selected manually by the driver in accordance with his requirements:

- A. Two wheel drive (2WD),**
- B. Four wheel drive (4WD AUTO),**
- C. Four wheel drive (4WD LOCK),**



Also...

You can change transmission mode when stationary or when driving at a speed below 60 mph (100 km/h).

Cruise control



This maintains a constant vehicle speed programmed by the driver.

1. **"ON/OFF"** button: activation/deactivation of the cruise control mode.
2. **"COAST SET"** button: storing of a driving speed then decreasing of the cruising speed.
3. **"ACC RES"** button: increasing of the cruising speed and recalling of the stored speed.
4. **"CANCEL"** button: switching off of the cruise control.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h) with at least second gear engaged.

Audible rear parking assistance



This detects any obstacle (person, vehicle, tree, gate,...) located behind the vehicle.

The vehicle is fitted with four sensors:

- D.** two side sensors.
- E.** two central sensors.