







Jear (usomer

You have just taken possession of your rechargeable (plug-in) hybrid vehicle. This brochure contains a few practical explanations to allow you to use this vehicle easily.

Your vehicle has a conventional petrol engine and a battery with a **power capacity of up to 13.2 kWh*.**

It will offer you a range** of up to 55 km in full electric mode and can be recharged like an electric vehicle in several different ways.

^{**}The range provided by the electric battery can vary from 40 to 55 km depending on the weight of the vehicle's load, the type of driving adopted and the use of equipment with high energy consumption such as the air conditioning









WITH E-SAVE, CHARGE WHILE YOU DRIVE

When you use the e-SAVE function, the engine rotates the electric motor which is in the gearbox to recharge the battery until the programmed energy level is reached. With this function, the battery can be fully recharged (e-SAVE Max position).

RECHARGE THE BATTERY BY CONNECTING CABLE 1

 
HOME CHARGING

Comes with the vehicle.





- Open the charging port by pressing the button at the top right of the port.
- The luminous guides in the port light up in white.
- Connect the cable on the box side to the domestic socket and then on the vehicle side.
- The luminous guides and the "CHARGING" indicator on the control box flash in green.
- · Immediate charging is engaged.
- The charging connector is locked in the port and the red indicator lights up.





You need to drive 2 km on average to recover 1 km of range (or 100 km on the motorway to recover 50 km of range). Once the set level is reached, the system switches to hybrid mode and maintains the level in the battery at the required threshold (10 km, 20 km or Max).

 
RECHARGE THE BATTERY BY CONNECTING CABLE 2

FAST CHARGING

Only if added as an accessory when ordering.







- Follow the instructions for use of the public charging station.
- · Connect the cable on the vehicle side.
- The luminous guides and the "CHARGING" indicator on the control box flash in green.
- · Immediate charging is engaged.
- **Upon locking of the vehicle the charging connector is locked** in the port and the red indicator light comes on.





DISCONNECTION
OF THE CABLE
WHEN CHARGING
IS COMPLETE

- Unlock the vehicle to unlock the charging connector from the charging port (the red indicator goes out in the port).
- · Within 30 seconds, remove the charging connector and unplug the cable and put it away.

^{*} Battery capacity ranges from 11.8 to 13.2 kWh depending on vehicle model.